

REQUIRES 819105 OR LINX COMMUNICATIONS BOX TO FUNCTION

EXTERNAL SENSOR KIT

4 SENSOR KIT – 819104

2 SENSOR KIT – 819107

WARNING




THIS PRODUCT CONTAINS A BUTTON CELL OR COIN BATTERY

Keep new and used batteries OUT OF REACH OF CHILDREN


Severe or fatal injuries could occur in 2 hours or less if a battery is swallowed or placed inside any part of the body.

Seek immediate medical attention if it is suspected that a battery has been swallowed or placed inside any part of the body.


INSTALLING SENSOR

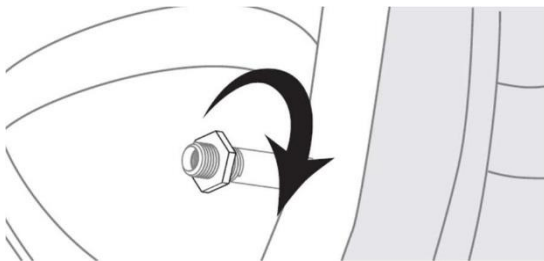

1. Remove the valve cap if fitted. Screw the supplied nut onto the valve.

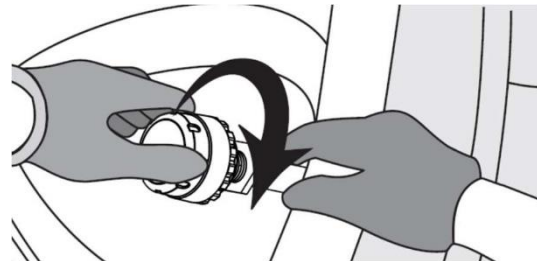


2. Screw the sensor onto the valve.

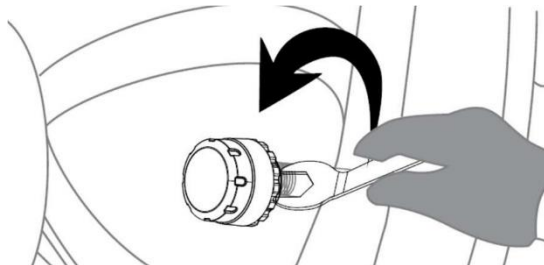

3. Using the spanner provided, tighten the nut counter clockwise to lock sensor into position. Only lock sensor into position after sensor has been paired.

CHANGING SENSOR BATTERIES

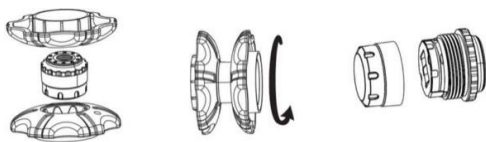

1. Using the plastic tools provided, unscrew the sensor counter clockwise to remove the top.



2. Remove old battery and insert the new one as shown (positive side facing up).



3. If required, replace O-Ring with the new one provided in kit. Screw top cover clock wise using plastic tools provided to seal sensor.