

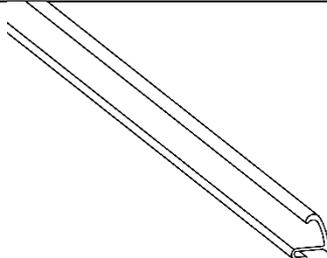
ARB BASE RACK

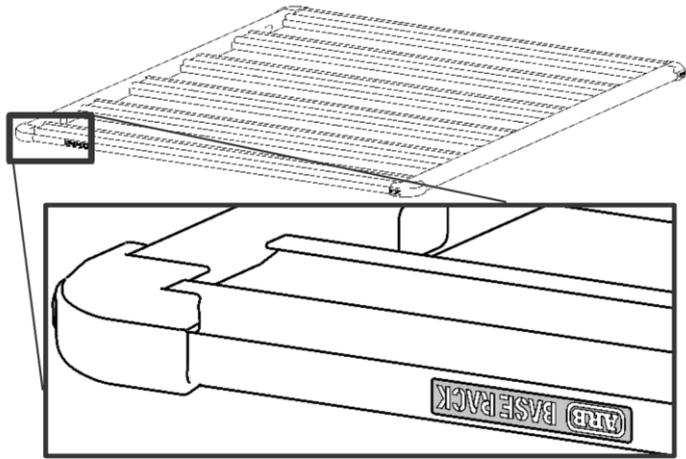
FITTING INSTRUCTION

Part Number: 17900110
 Product Description: BASE Rack Air Deflector Strip

REQUIRED TOOLS FOR FITMENT OF PRODUCT:

5.0mm (3/16") Drill	Scissors/Snips
Pop-Rivet Tool	

PARTS LISTING		
PART	QTY	DIAGRAM
Air Strip	1	
Pop Rivet 4.8x19mm (3/16x3/4")	4	

FITTING PROCEDURE	
	<ol style="list-style-type: none"> 1. For ease of fitment, it is recommended to fit the airstrip before installation of rack on the vehicle 2. Place rack upside down on a flat non-scratch surface

	<ol style="list-style-type: none"> 3. Hold the strip to the rack aligning to the endcap as shown 4. If required, trim excess to match the end cap on the other side
	<ol style="list-style-type: none"> 5. Starting at one end install the strip on the front lower edge of the rack 6. Push in firmly to stop and check straightness 7. Continue fitting the rack with the air strip towards the front of the vehicle
	<ol style="list-style-type: none"> 8. Mark 4 evenly spaced drill points on the extrusion 9. The marks should be between the two small indicator lines in the rack
	<ol style="list-style-type: none"> 10. Using a 5mm drill, drill through the strip and lower rack surface rack on previously made marks 11. Install pop rivet in each hole