

**Step 1.** Assemble all 6 brackets as shown using common plate [9AV028], 2 x M8x20mm bolts [item 4] and 2 x M8 flange nuts [item 5]



**Step 2.** Move to the L/H (Passenger) side of the vehicle. Locate front mounting position, approx. 270mm from front wheel arch.




**Step 3.** Fasten common front bracket [9AV029] to the vehicle using 2 x M6x25mm HT S/Screws [item 2], 1/4x3/4x16g flat washers [item 3], 2 x M6 flange nuts [item 1] and 1 x M8 flange bolt [item 6] as shown.



**Step 4.** Complete step 3 for centre and rear bracket locations. 980mm from front wheel arch and 300mm from rear wheel arch respectively.



**Step 5. OPTIONAL:** Step pads can be installed on board. As a guide fit step pads under door centres, using 4 x self drilling screws **[item 8]** per step pad.

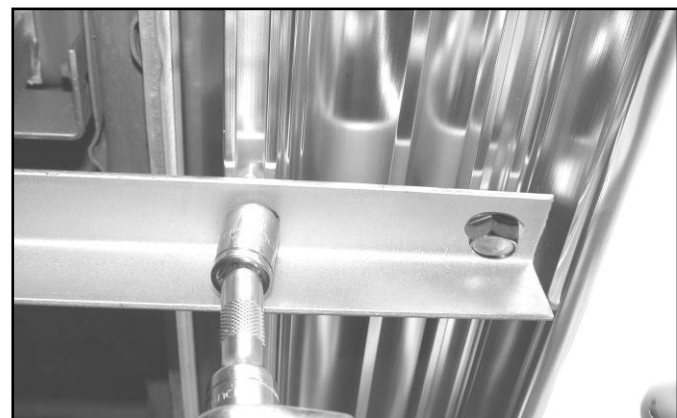

**Step 6.** Finally install stepboard to brackets using 2 x M8 x 11mm flange bolts **[item 7]** per bracket. Tighten to 13Nm.

**7. Now complete steps 2-6 for the R/H (Drivers) side of vehicle.**

- Place “KINGSLEY SIDE STEP Warranty” on customer’s front seat
- Clean the side steps if necessary using PH - Neutral soapy water ONLY