

FITTING INSTRUCTIONS**Part No: 35N500****NISSAN DUALIS I & II 01/2008-06/2014****&****NISSAN QASHQAI J11 Model Commencing 07/2014****ENDCAPS:** Front - fitted with Standard endcaps
Rear - fitted with Standard endcaps**STEPPADS:** Front - 1 pair PLAIN
Rear - 1 pair PLAIN**HARDWARE KIT CONTENTS**

ITEM NO.	DESCRIPTION	QTY
1	M6 Rail Bolt	2
2	M6 Flange Nut	6
3	M6 Cap Screw	4
4	¼ x 9/16 Flat Washer	4

ITEM NO.	DESCRIPTION	QTY
5	M8x11mm Flange Nut	18
6	Rust Inhibitor	1
7	8Gx12mm Truss HD sds	16
8	M8x32mm Flat Washer	2

STEPBOARD BRACKETS

PART NO.	DESCRIPTION	QTY
9AP047	Front Common Bracket	2
9AP048	Rear Common Bracket	2
9AL091	Rail	2
-	-	-

BEFORE INSTALLATION: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION, PAYING SPECIAL ATTENTION TO ALL 'NOTES'. FAILURE TO DO SO MAY RESULT IN DAMAGE OF PARTS AND/OR INJURY TO INSTALLER OR CUSTOMER.

TOOLS REQUIRED: • ELECTRIC DRILL OR EQUIV • 6.5MM & 3MM DRILL BITS • TAPE MEASURE • 10MM & 13MM SOCKET & RATCHET • 10MM & 13MM RING/OPEN SPANNER • TORQUE WRENCH • MARKING PEN .

FITTING PROCEDURE**Approx Fitting time 60 mins**


NOTE: The SIDE STEPS have been assembled with the hex nuts already inserted into the board channels for your convenience. For now, lay them in a safe place to prevent damage and fit the brackets as per instructions below.



Step 1. Move to the R/H (Driver) side of the vehicle. Locate front mounting position, approx. 270mm from front wheel arch. Remove the rear most M8 bolt assembly and retain.



Step 2. Loosely fit front bracket (9AP047) with Bolt assembly from step 1.

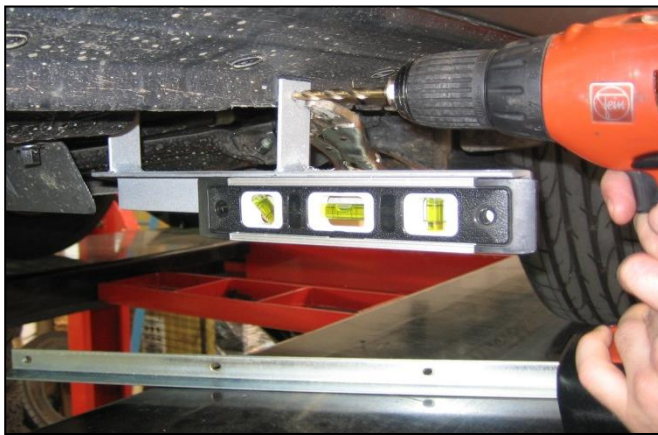

Step 3. Position front plate of the bracket onto the outside of the sill. Ensure it is level and square. Use hole in plate as a guide and drill a 3mm pilot hole through the sill. Slide the plate to one side revealing the pilot hole and open up using a 6.5mm drill bit.



Step 4. Apply rust inhibitor (item 6) to open surface.




Step 5. Fasten front bracket (9AP047) to the sill with M6 cap screw (item 3), ¼ x 9/16 flat washer (item 4) and M6 flange nut (item 2).



Step 6. Locate rear mounting position approx. 370mm from rear wheel arch.



Step 7. Loosely fit M6 rail bolt (item 1) onto the rear common bracket (9AP048) with a M8x32mm flat washer (item 8) and a M6 flange nut (item 2). Slide the rail bolt into hole in vehicle as shown in the picture.

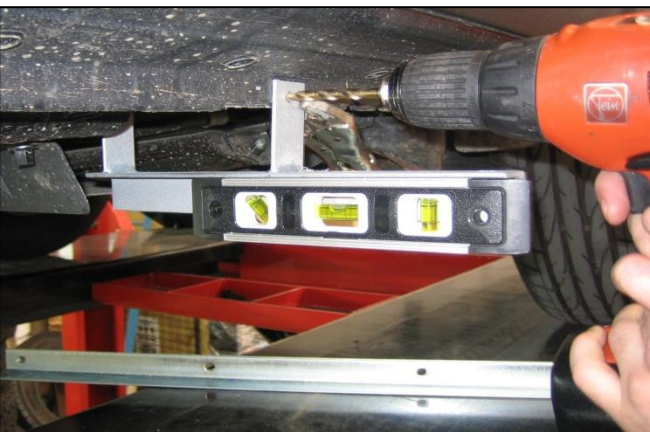

Step 8. Position front plate of the bracket onto the outside of the sill. Ensure it is level and square. Use hole in plate as a guide and drill a 3mm pilot hole through the sill. Slide the plate to one side revealing the pilot hole and open up using a 6.5mm drill bit.



Step 9. Apply rust inhibitor (item 6) to open surface.



Step 10. Fasten front bracket (9AP048) to the sill with M6 cap screw (item 3), ¼ x 9/16 flat washer (item 4) and M6 flange nut (item 2).


Note: Qashqai remove small rear mud flap and discard or trim to suit side step.



Step 11. Install rail on bottom of step (9AL091). Insert 5 x M8 x11 flange bolts (item 5), picking up captive nuts in channel. **Note:** 2 spare nuts must be located at either end of rail for installation of brackets. Before tightening ensure rail is located centrally between front and rear bracket. Tighten to 13Nm.



Step 12. OPTIONAL: Step pads can be installed on board. As a guide fit step pads under door centres, using 4 x self drilling screws (item 7) per step pad.

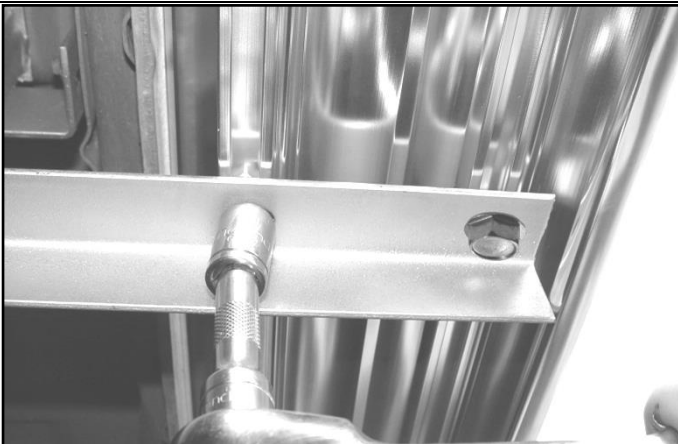

Step 13. Finally install stepboard to brackets using 2 x M8 x 11mm flange bolts (item 5) per bracket. Tighten to 13Nm.

14. Now complete steps 1 – 13 for the L/H (Passenger) side of vehicle.

- Place “KINGSLEY SIDE STEP Warranty” on customer’s front seat
- Clean the side steps if necessary using PH - Neutral soapy water ONLY