





TAILGATE INSTALLATION INSTRUCTIONS (K735)

PRO-FORM | ARB 4X4 ACCESSORIES

A	B	C	D	E	F	G
						
Tailgate X1	X6	X12	M5 X12	M4.2 X12	Spacer X7	1440mm X1


1

Clean Vehicle Tailgate

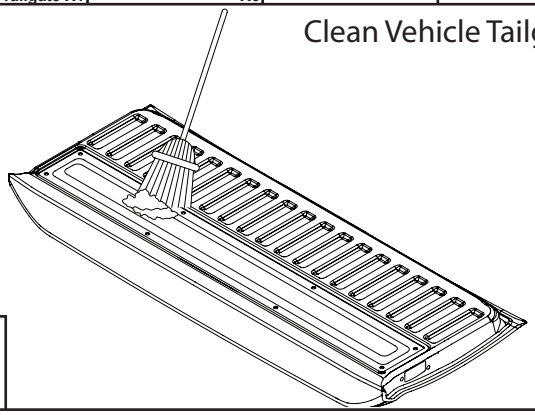


2


Remove all factory screws
Keep screws for future use
*See table at the bottom of the page.

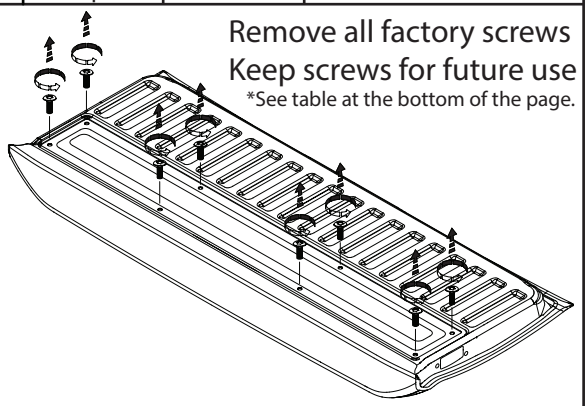


3

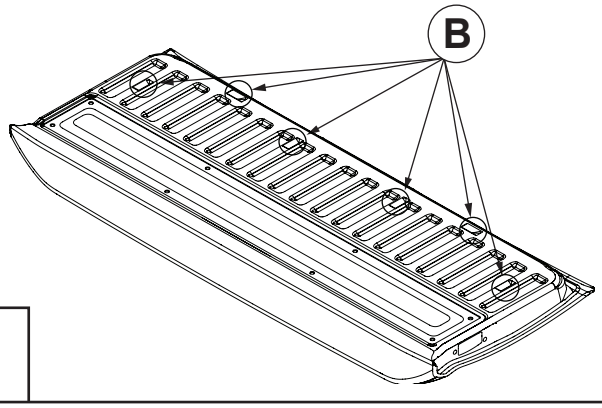

4

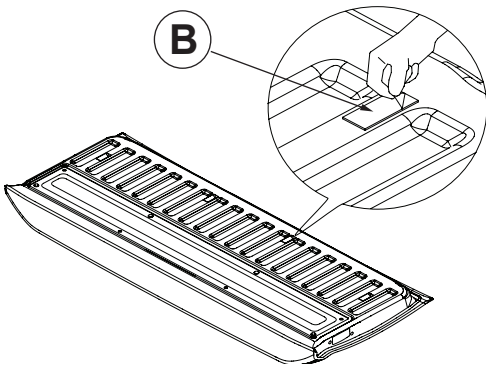


5

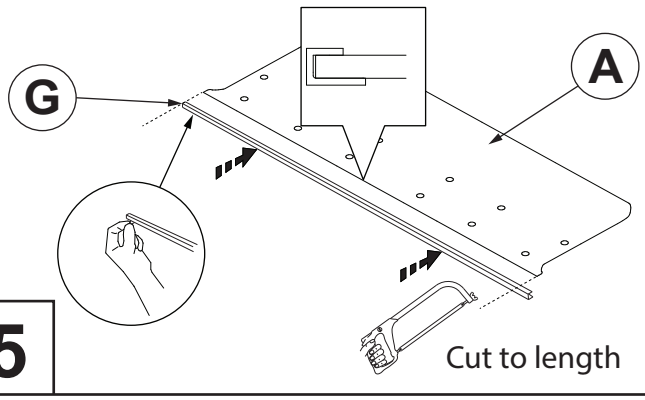


Cut to length

6

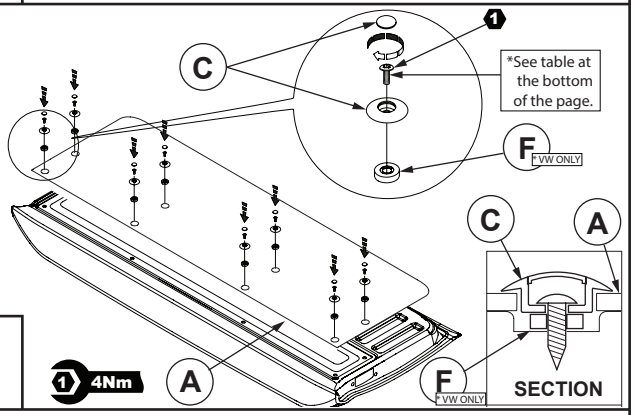

7

Apply pressure for sufficient adhesion

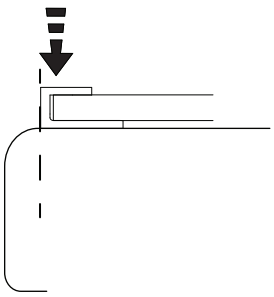

	Dome caps	Screws	Washer	Capping
Ford	6	Factory	No	Yes
Mazda	6	Factory	No	Yes
Holden	12	M5	No	Yes
Isuzu	12	M4.2	No	Yes
Mitsubishi	8	M5	No	Yes
VW	7	M5	Yes	Yes
Toyota	6	Factory	No	Yes
Toyota J	5	Factory	No	Yes

*Re-use the factory screws if "Factory" is specified above.

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K735	ALL	UR	-	General	-	Tailgate	1	23/10/19	1 of 1