HardLid Premium Fitting Instructions for Ford Ranger 2022+

ARB New Zealand	
Part #	10057994
Instruction #	10058093 (1of 2) *To be used in conjunction with instruction # 10058238 (2 of 2)*

PRO-FORM | ARB 4X4 ACCESSORIES

HardLid Premium Fitting Instructions for Ford Ranger 2022+

Part # 10057994

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

General Notes
To aid in installation the correct order of installation needs to be followed:

1. Install all electrical components first (1 of 2) **(electrical components are supplied seperately)**
2. Install Vehicle Tub Sealing Kit
3. Install vehicle tub protective products such as tub liners*
4. Install styling bar onto HardLid
5. Install the HardLid Fitting Kit (2 of 2)
6. Install the HardLid (2 of 2)
7. Install any additional accessories such as roof racks.

**HardLid is compatible with under rail and Sport Guard style tub liners. Some trimming may be required. OEM liner compatibility cannot be guaranteed. Please contact your dealer for more information.*

- HardLid is supplied with 400N Gas Struts which are suitable for an unloaded lid. Recommended maximum loading of 25 kgs when opening the lid. If you require your lid to remain open whilst loaded, you will need to purchase a Heavy Load Strut Upgrade Kit which is available through your local dealer. Please use one of the following part numbers as a reference when contacting your dealer:

ARB NZ Part #	ARB AU Part #	Gas Strut N	
10056207	176202	450N	
10056209	176201	500N	

- Read through the fitting instructions before installation of accessory.
- Check that the contents of the Fitting Kit are complete and undamaged.
- If any contents of the Fitting Kit are found incomplete or damaged they must be replaced using the specified accessory components.
- Always install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory and void the warranty.
- Ensure all recyclable discarded vehicle/accessory components and packaging are disposed following local recycling regulations.
- Safely store and protect any removed vehicle components.
- Ensure all bare metal surfaces are protected using Automotive Bare Metal Primer and touch-up paint.
- Remove all metal swarf and dust from all vehicle surfaces.
- Ensure all fasteners are torqued to the specifications as per instruction.
- Apply any adhesives to the vehicle only when the surface temperature is between 20°C to 40°C.
- **Bedliner:** Recommended rust preventative solution be applied to vehicle surfaces before installation.

General Vehicle and Accessory Warranty Notes and Cautions
- For correct installation and proper operation of the vehicle and accessory we recommend this accessory is fitted by a qualified Technician.
- During the accessory fitment ensure all automotive safety practices and regulations are followed.
- Do not modify the vehicle in any way other than specified in these Accessory Fitting Instructions as this may void the warranty.

Safety Notes
- Check that all work practises comply with safety standards.
- It is advisable to seek assistance from another person when lifting heavy components.
- While using power tools ensure safe procedures are followed.
- Appropriate clothing & PPE must be worn.

In producing this document ARB NZ Ltd. has relied upon information and representations made by third party suppliers and to the extent permitted by law ARB NZ accepts no responsibility for any losses, faults or damage caused to the vehicle or accessory components that occur due to a failure to properly follow these instructions.

ARB NZ Ltd
35 Foreman Road, Hamilton, New Zealand 3200



HardLid Premium Fitting Instructions for Ford Ranger 2022+

Part # 10057994

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

Tools Required					
1	Philips head screwdriver				

Kit Contents- Hardware

No.	Item Description	Quantity	Image	Service Part Number
1	FORD RANGER 22+ VEH WIRING LOOM	1		10057716
2	CABLE TIE MOUNT	6		
3	CABLE TIE BLK 150X3MM	12		
4	WASHER FLAT M5x12.5x1MM SS	1		10052603
5	RIVET 6.6 DOMED 4.8X14.3 AL	1		10000089
6	BRAID SLEEVE 19MM BLK 14-30mm	1		10055265
7	CABLE TIE BLK 303X7.6mm RELEASE	1		10055284
8	CABLE TIE MOUNT 16-PHC-2/6	1		10055285
9	CABLE TIE BLK 610MM	3		10053812
10	ISOPROPYL ALCOHOL WIPE	1		10051664
11	3M 94 PRIMER	1		10051996

In producing this document ARB NZ Ltd. has relied upon information and representations made by third party suppliers and to the extent permitted by law ARB NZ accepts no responsibility for any losses, faults or damage caused to the vehicle or accessory components that occur due to a failure to properly follow these instructions.

ARB NZ Ltd
35 Foreman Road, Hamilton, New Zealand 3200


HardLid Premium Fitting Instructions for Ford Ranger 2022+


Part # 10057994

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

Step 1

- Locate the factory connector beneath the rear, right hand side tail light.
- Disconnect the factory connection and install the patch harness, item 1.

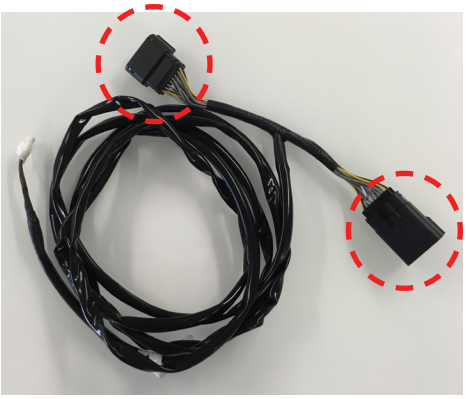

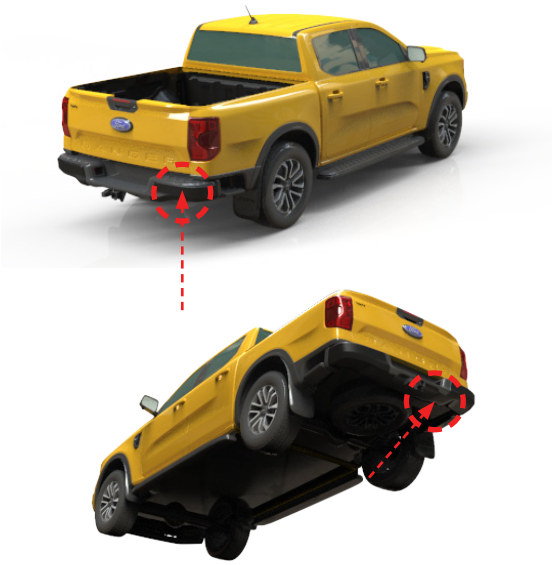


Step 2

- Remove the screws (X2), located on the inside face of the rear left hand side post.
- Pop the rear, left hand side tailgate light out of the cavity.



Step 3

- Feed the patch harness along the rear of the vehicle chasis. Fasten it to the chasis using item 9, X 3.
- Feed the harness up through the bottom of the light cavity.
- Feed the patch harness through the top corner of the light cavity, into the vehicle tub.

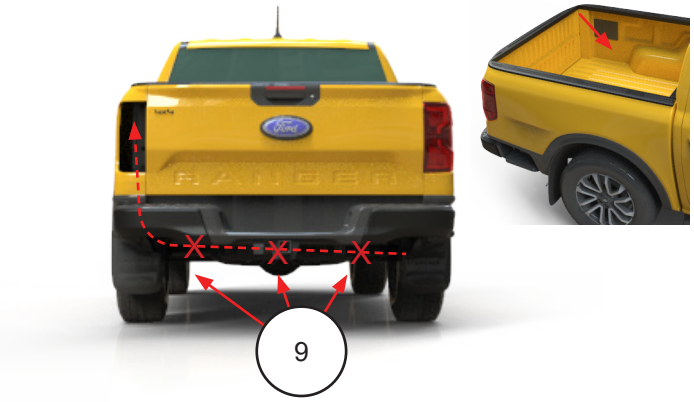

In producing this document ARB NZ Ltd. has relied upon information and representations made by third party suppliers and to the extent permitted by law ARB NZ accepts no responsibility for any losses, faults or damage caused to the vehicle or accessory components that occur due to a failure to properly follow these instructions.

ARB NZ Ltd
35 Foreman Road, Hamilton, New Zealand 3200

HardLid Premium Fitting Instructions for Ford Ranger 2022+


Part # 10057994

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

Step 4

- Clean under the left hand side rail using the alcohol wipe, item 10.
- Prime the surface beneath the rail using the primer stick, item 11.
- Install the cable tie mounts, item 2 (X6), evenly along the underside of the left hand side rail.



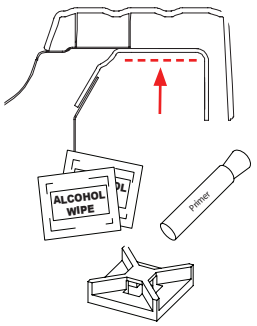

Step 5

- Fasten the patch harness, item 1 to the cable tie mounts using item 3.
- Ensure there is approximately 200mm of patch harness at the front corner of the tub.
- Reinstall the left hand side tail light.





!!! Complete instruction 2 of 2, 10058238 before proceeding to Step 6 !!!

In producing this document ARB NZ Ltd. has relied upon information and representations made by third party suppliers and to the extent permitted by law ARB NZ accepts no responsibility for any losses, faults or damage caused to the vehicle or accessory components that occur due to a failure to properly follow these instructions.

ARB NZ Ltd
35 Foreman Road, Hamilton, New Zealand 3200


HardLid Premium Fitting Instructions for Ford Ranger 2022+

Part # 10057994

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.


Step 6

- Measure and mark 50mm X 15mm from the front bottom corner of the Vehicle Connector Rail.
- Drill a 5mm hole in the LHS Vehicle Connector Rail at the marked location.

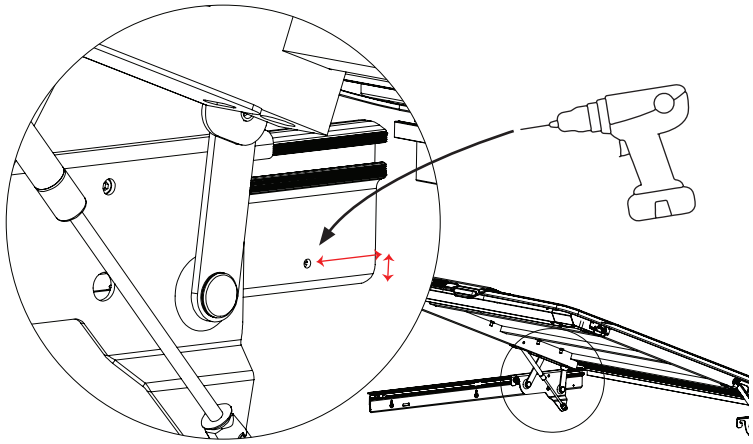


Step 7

- Rivet (5) the cable tie mount (8) and washer (4) into the drilled hole as shown.

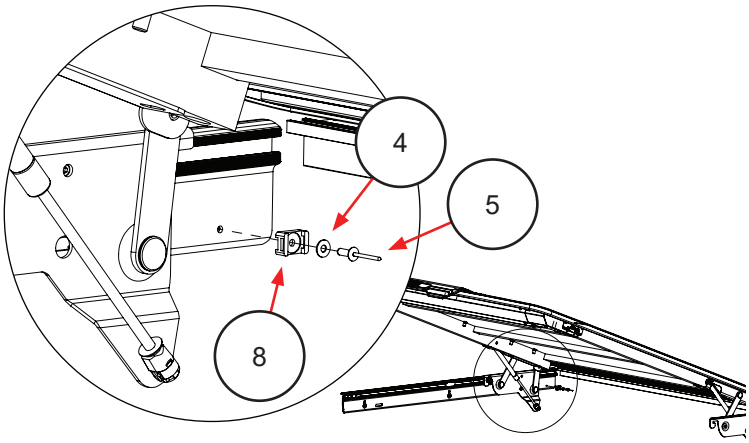

Step 8

- Slide the braided sleeve (6) over one end of the loom.
- Connect the lid loom to the vehicle central locking loom (1).
- Slide the braided sleeve over the connectors.

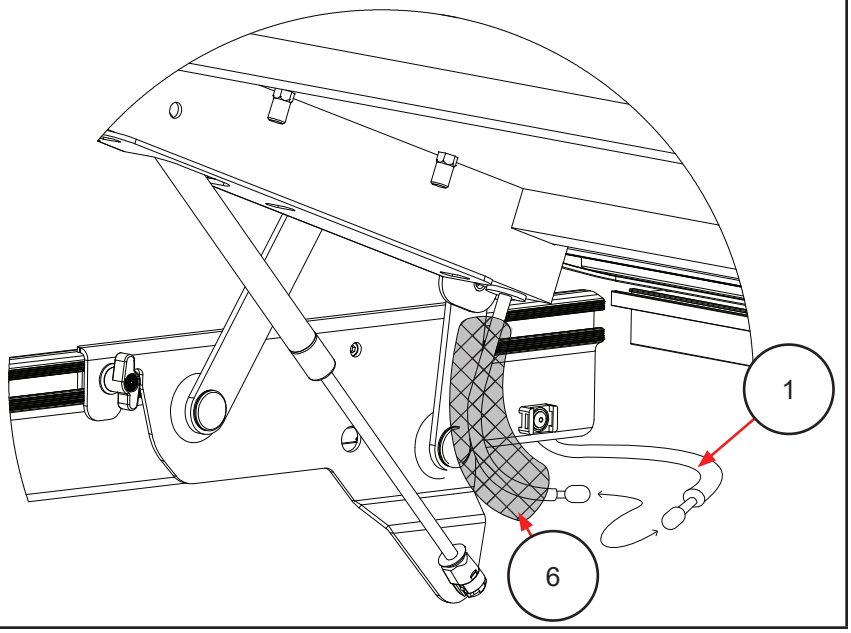

In producing this document ARB NZ Ltd. has relied upon information and representations made by third party suppliers and to the extent permitted by law ARB NZ accepts no responsibility for any losses, faults or damage caused to the vehicle or accessory components that occur due to a failure to properly follow these instructions.

ARB NZ Ltd
35 Foreman Road, Hamilton, New Zealand 3200


HardLid Premium Fitting Instructions for Ford Ranger 2022+

Part # 10057994

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

Step 9

- Fasten the loom to the zip tie mount using item 7.

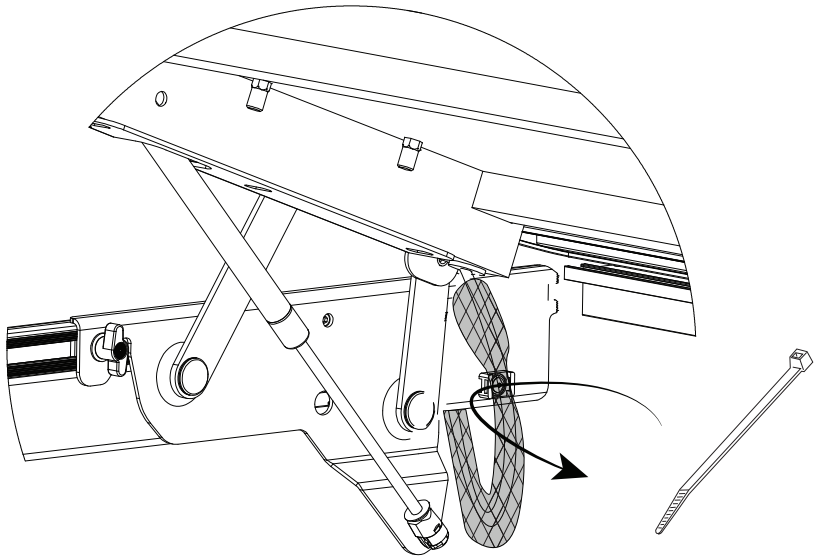

In producing this document ARB NZ Ltd. has relied upon information and representations made by third party suppliers and to the extent permitted by law ARB NZ accepts no responsibility for any losses, faults or damage caused to the vehicle or accessory components that occur due to a failure to properly follow these instructions.

ARB NZ Ltd
35 Foreman Road, Hamilton, New Zealand 3200